

Injection Line Connection

If you have not read the **General Plumbing Instructions** for replacing plumbing parts on the KinExA® please do so now before continuing.

The following **Parts and/or Tools** are required to complete this installation:

- [1] *Injection Line Connection* ([344250](#))
- [1] *M6 Black Nut* ([346101](#))
- [1] *1/16" White Ferrule* ([347016](#))

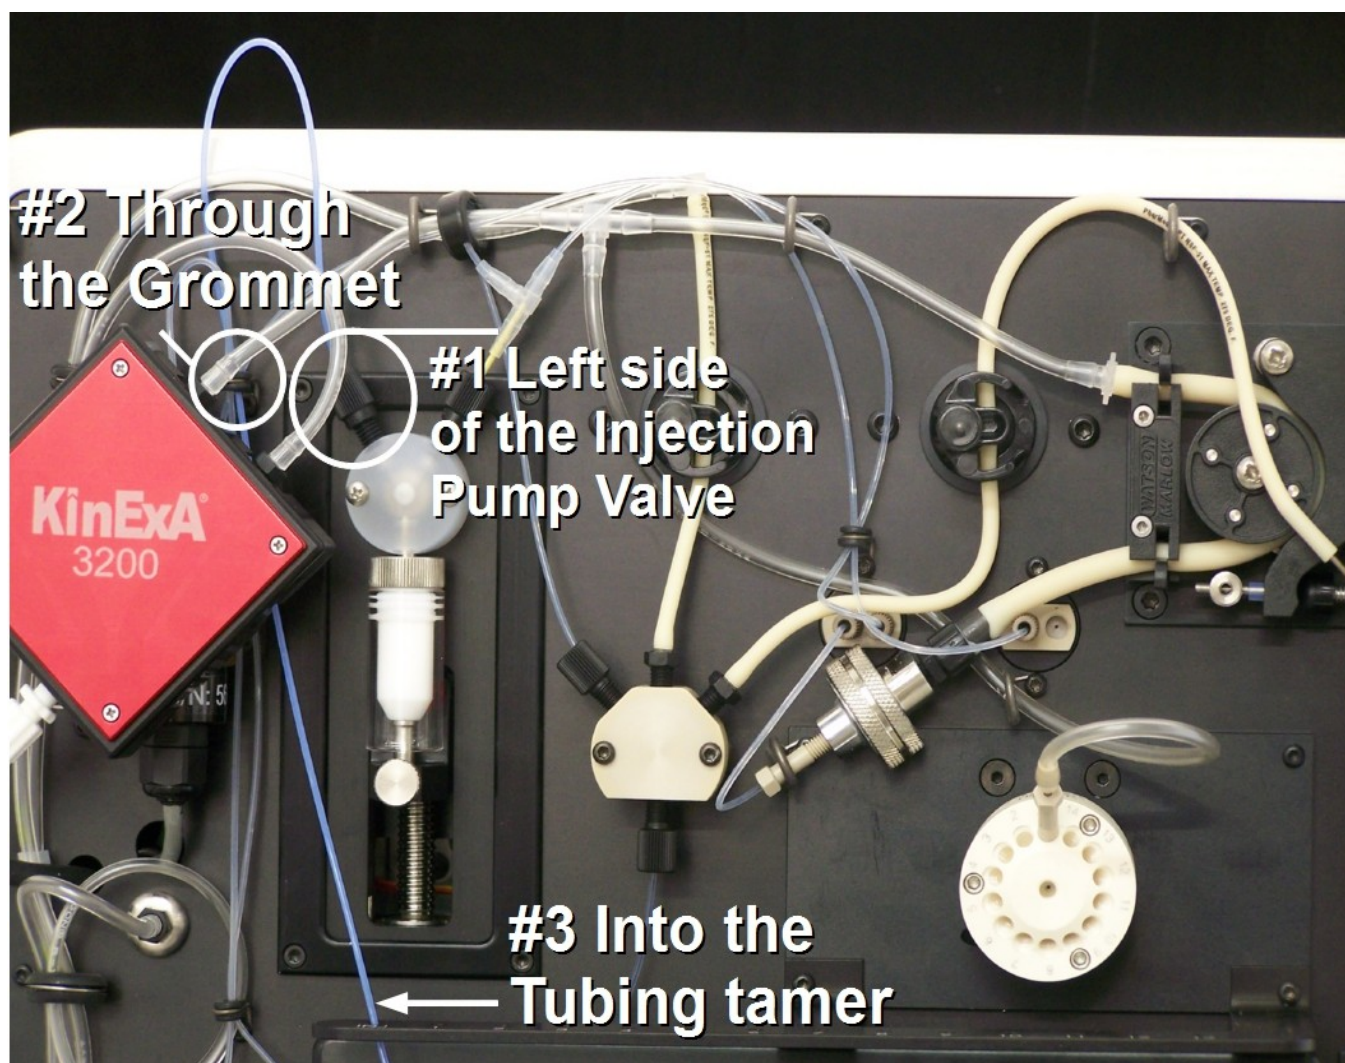


Figure 1: Injection Line Connection routing diagram.

- Install the *Injection Line* into the **left** side of the *Injection Pump Valve* using a *1/16" White Ferrule* ([347016](#)) with an *M6 Black Nut* ([346101](#)) (**Figure 1, #1**).
- Route the other end through the small grommet on the left side of the *Injection Pump* and down through the first hole in the *Tubing Tamer* (**Figure 1, #2 and #3**).